



Measuring Guide

The first step is to measure the width and height from brick to brick (not the existing frames, if a door or window is already in place). This measurement is also known as the "structural opening."

We recommend measuring at three different points for both height and width to ensure consistency in the brickwork. If you notice any discrepancies, use the smallest measurement as your reference.

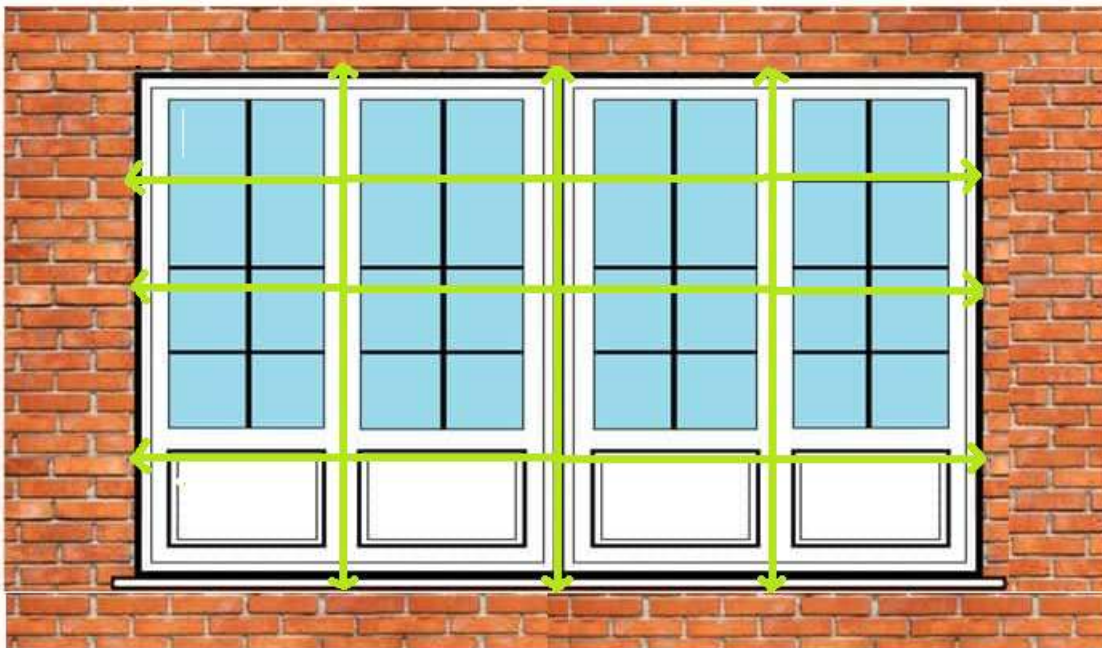

You should also measure the cross corners and, if possible, take a diagonal measurement to verify that the brickwork is aligned correctly.

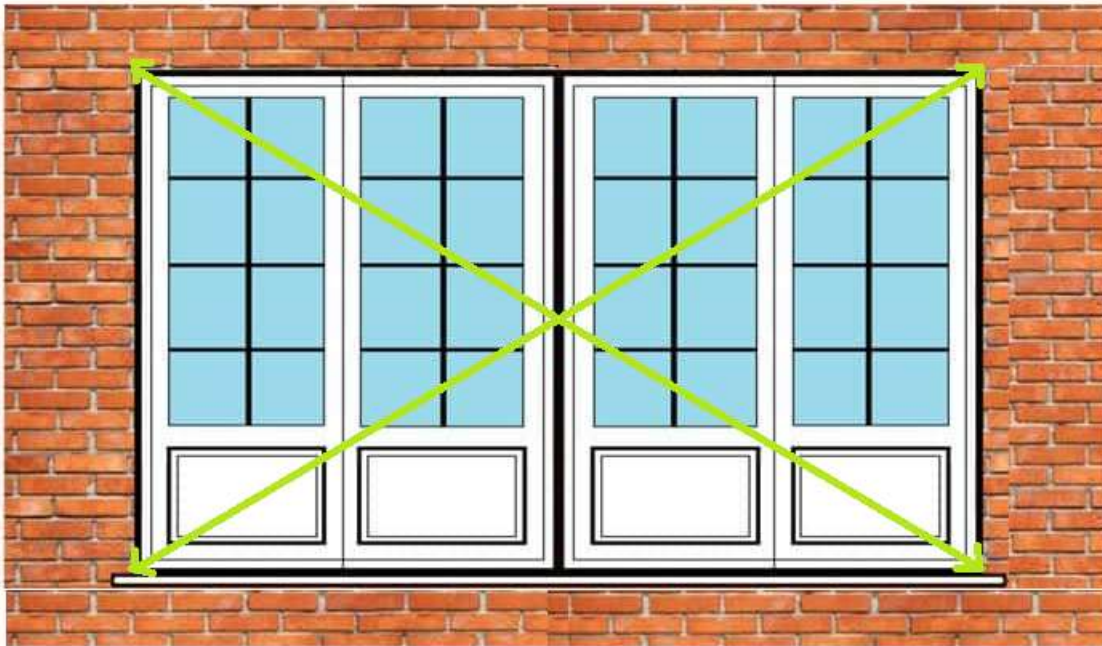

After obtaining your brick-to-brick measurements, you should subtract 10mm from both the overall width and height. These are the dimensions you will use for the size you order. The 10mm deduction accounts for fitting tolerance, ensuring that the item fits easily into the opening. Please note that we do not make this deduction for you! For example as shown in the below image, if your brick-to brick measurements are 2110mm(h) by 3010mm(w), the size you will need to order is 2100mm(h) by 3000mm(w)

